



Heat Transfer Service Unit

Instruction Manual

HT10XC

ISSUE 11

October 2012

Table of Contents

Disclaimer	1
Copyright and Trademarks	1
General Overview	2
Equipment Diagrams.....	4
Important Safety Information.....	5
Introduction.....	5
Electrical Safety.....	5
Description	6
Overview.....	6
Modes of Operation	6
Front of Service Unit.....	7
Rear of Service Unit	9
Installation.....	10
Advisory.....	10
Electrical supply.....	10
Installing the optional PC Software.....	10
Installing the Equipment	11
Electrical Wiring Diagram	16
Operation	17
Operating the optional PC Software	17
Operating the Equipment.....	17
Operation using customer Generated software.....	19
Equipment Specifications.....	20
Overall Dimensions	20
USB Channel Numbers	20
Environmental Conditions.....	21
Routine Maintenance	22
Responsibility	22
General.....	22

Table of Contents

Fault Finding.....	22
Thermocouple Calibration	23
Contact Details for Further Information	25

Disclaimer

This document and all the information contained within it is proprietary to Armfield Limited. This document must not be used for any purpose other than that for which it is supplied and its contents must not be reproduced, modified, adapted, published, translated or disclosed to any third party, in whole or in part, without the prior written permission of Armfield Limited.

Should you have any queries or comments, please contact the Armfield Customer Support helpdesk (Monday to Thursday: 0830 – 1730 and Friday: 0830 - 1300 UK time). Contact details are as follows:

United Kingdom	International
(0) 1425 478781 (calls charged at local rate)	+44 (0) 1425 478781 (international rates apply)
Email: support@armfield.co.uk	
Fax: +44 (0) 1425 470916	

Copyright and Trademarks

Copyright © 2012 Armfield Limited. All rights reserved.

Any technical documentation made available by Armfield Limited is the copyright work of Armfield Limited and wholly owned by Armfield Limited.

Brands and product names mentioned in this manual may be trademarks or registered trademarks of their respective companies and are hereby acknowledged.

General Overview

The Armfield HT10XC is a service unit, which can be used in conjunction with a range of small scale accessories to demonstrate the three basic modes of heat transfer (conduction, convection and radiation). The factors that affect the rate of heat transfer can be investigated and some of the practical problems associated with the transfer of heat can be clearly demonstrated.

The heat transfer accessories may be individually connected to the HT10XC service unit, which provides the necessary electrical supplies and measurement facilities for investigation and comparison of the different heat transfer characteristics.

The HT10XC incorporates the facilities and safety features to allow the accessories to be remotely controlled from an external computer (computer running Windows™ 98, 2000 or XP) connected via a USB cable. All the facilities can also be accessed locally using the front panel controls and displays.

The following heat transfer accessories are available for use under manual control using the control console:

- HT11 Linear heat conduction
- HT12 Radial heat conduction
- HT13 Laws of radiant heat transfer and radiant heat exchange
- HT14 Combined convection and radiation
- HT15 Extended surface heat transfer
- HT16 Radiation errors in temperature measurement
- HT17 Unsteady state heat transfer

In addition the following accessories can be used in computer control applications with remote data acquisition:

- HT11C Linear heat conduction*
- HT12C Radial heat conduction
- HT13 Laws of radiant heat transfer and radiant heat exchange*
- HT14C Combined convection and radiation (not yet available)
- HT15 Extended surface heat transfer
- HT16C Radiation errors in temperature measurement (not yet available)
- HT17 Unsteady state heat transfer*

* The HT11C, HT13 and HT17 all require manual intervention to alter the configuration of the apparatus, e.g. to change the material samples under test in the HT11C and to alter the radiometer distance in HT13. Once the equipment has been configured for the set of data required, data can then be logged remotely.

NOTE: The HT13, HT15 and HT17 are identical to the accessories available for the HT10X base unit, and may be used with both the HT10X and the HT10XC. Other

accessories intended for use with the HT10X base unit may also be useable with the HT10XC, but will not have the full functionality of the C versions and may consequently require manual intervention.

This product manual describes the function of the HT10XC 'Heat Transfer Service Unit'.

Each of the individual heat transfer accessories (listed above) is supplied with its own instruction manual. The instruction manual describes the operation of the particular accessory when used in conjunction with the HT10XC service unit in relation to those functions normally associated with the laboratory technician. It also includes a set of Laboratory Teaching Exercises designed to cover the theory and experiments/demonstrations relevant to that accessory. Each exercise includes detailed instructions on how to record the appropriate readings and which calculations to perform to analyse the performance.



HT10XC Heat Transfer Service Unit (Connected to thermocouples T1 – T6 and to flow rate sensor Fw)

Note: Compatibility of HT10XC with HT14, HT14C, HT16 & HT16C

In February 2006 a component becoming obsolete forced Armfield Ltd to change the mains outlet connector (OUTPUT 1) at the rear of the HT10XC console and the corresponding plug on the mains lead of the HT14, HT14C, HT16 and HT16C. No other accessories to the HT10XC are affected by this change.

An adaptor 'ADAPTOR1-HT10' is available from Armfield Ltd that allows a current HT10XC to be used with an original HT14, HT14C, HT16 or HT16C. If the mains plug on your HT14, HT14C, HT16 or HT16C has exposed pins that do not mate with OUTLET 1 on HT10XC then 'ADAPTOR1-HT10' is required.

Similarly 'ADAPTOR2-HT10' is available from Armfield Ltd that allows an original HT10XC to be used with a current HT14, HT14C, HT16 or HT16C. If the mains plug on your HT14, HT14C, HT16 or HT16C has pins protected by a shrouded cover that does not mate with OUTLET 1 on HT10XC then 'ADAPTOR2-HT10' is required.

If you need an adaptor please contact Armfield Ltd specifying if 'ADAPTOR1-HT10' or 'ADAPTOR2-HT10' is required for correct functioning of the equipment.

Equipment Diagrams

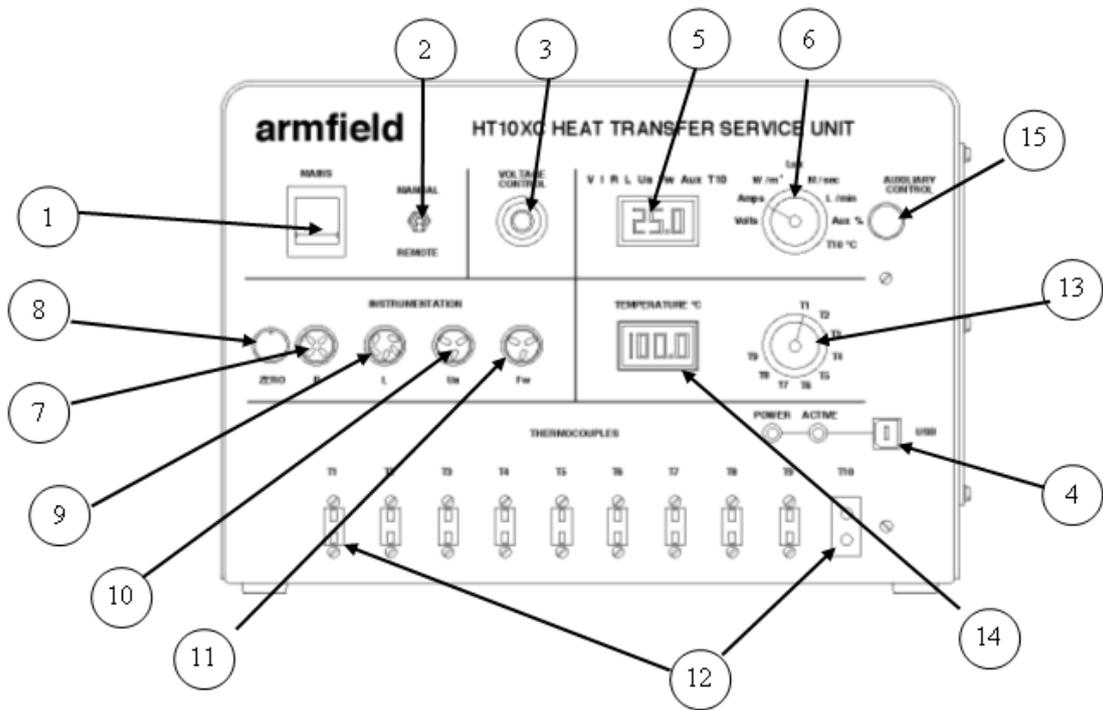


Figure 1: Front View of HT10XC Heat Transfer Service Unit

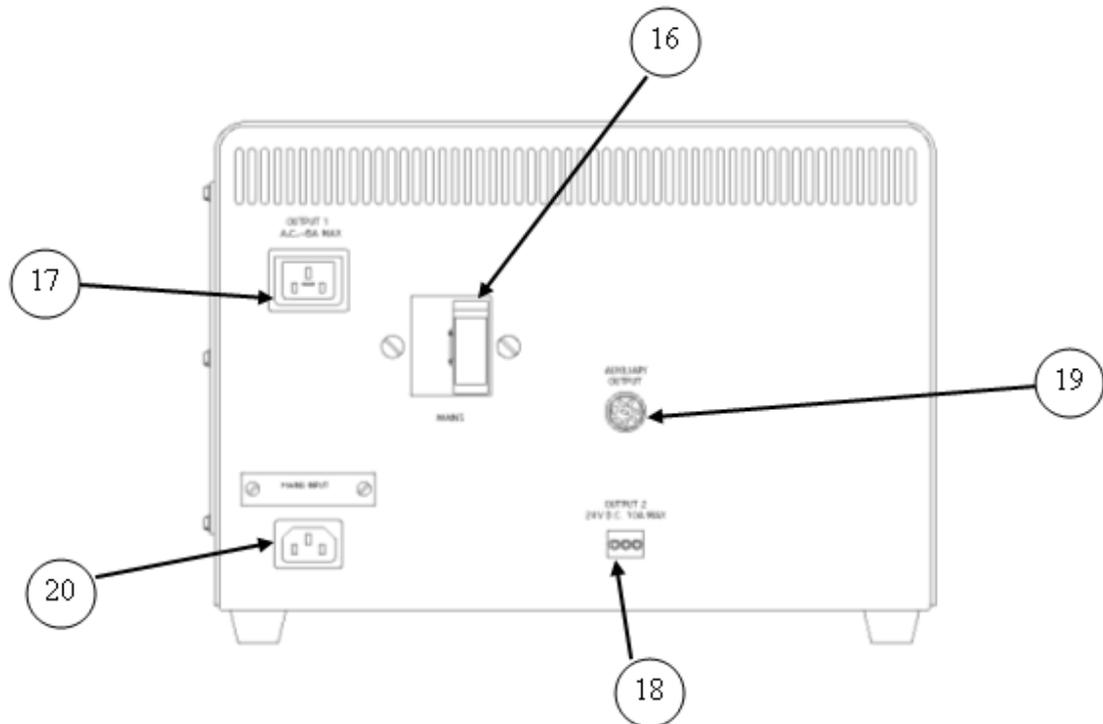


Figure 2: Rear View of HT10XC Heat Transfer Service Unit

Important Safety Information

Introduction

All practical work areas and laboratories should be covered by local safety regulations **which must be followed at all times**.

It is the responsibility of the owner to ensure that all users are made aware of relevant local regulations, and that the apparatus is operated in accordance with those regulations. If requested then Armfield can supply a typical set of standard laboratory safety rules, but these are guidelines only and should be modified as required. Supervision of users should be provided whenever appropriate.

Your **HT10XC Heat Transfer Service Unit** has been designed to be safe in use when installed, operated and maintained in accordance with the instructions in this manual. As with any piece of sophisticated equipment, dangers exist if the equipment is misused, mishandled or badly maintained.

Electrical Safety

The equipment described in this Instruction Manual operates from a mains voltage electrical supply. It must be connected to a supply of the same frequency and voltage as marked on the equipment or the mains lead. If in doubt, consult a qualified electrician or contact Armfield.

The equipment must not be operated with any of the panels removed.

To give increased operator protection, the unit incorporates a Residual Current Device (RCD), alternatively called an Earth Leakage Circuit Breaker, as an integral part of this equipment. If through misuse or accident the equipment becomes electrically dangerous, the RCD will switch off the electrical supply and reduce the severity of any electric shock received by an operator to a level which, under normal circumstances, will not cause injury to that person.

At least once each month, check that the RCD is operating correctly by pressing the TEST button. The circuit breaker **MUST** trip when the button is pressed. Failure to trip means that the operator is not protected and the equipment must be checked and repaired by a competent electrician before it is used.

Description

Where necessary, refer to the drawings in the [Equipment Diagrams](#) section.

Overview

The service unit is housed in a robust steel enclosure and designed for use on a bench or table.

It provides two outputs to the accessories:

A stabilised, variable low voltage DC supply to the heater of the heat transfer accessory under evaluation.

- A variable output (Auxiliary Output) to drive other functions (accessory dependant). This auxiliary output takes two forms, a 0-5V signal and a 24V pulse width modulated signal. Either of these signals can be used as appropriate by the Heat Transfer Accessory.

The Service Unit also incorporates the necessary instrumentation to measure the variables associated with heat transfer, namely:

- Temperatures
- Heater voltage
- Heater current
- Heat radiated
- Light radiated
- Air velocity
- Cooling water flowrate

Modes of Operation

Refer to Figure 1.

Manual Mode

In manual mode, the outputs listed above are under control of potentiometers on the front panel of the unit. A ten turn potentiometer (3) controls the heater voltage, and a one turn potentiometer (15) controls the auxiliary output.

Manual mode is entered whenever the standby switch (1) is ON, and the Manual/Remote switch (2) is in Manual

The outputs from the accessory being used are shown on the front panel displays. One display is used for the ten temperature inputs, and a selector switch is used to choose the appropriate input. Similarly, all the other inputs are displayed on the other display, and a selector switch used to choose the input being displayed.

Remote Mode

In remote mode the two outputs to the accessories are controlled by the computer, or other external device. As the heater output is capable of providing high currents, and

producing high temperatures in the accessories, a number of safeguards have been incorporated to ensure operator and equipment safety in event of a computer failure.

To enter remote mode, the following conditions need to be met:

- Off/Standby switch in Standby and Manual/Remote switch in remote
- A series of regular 'Watchdog' pulses on the watchdog input

The unit can be then powered up fully by setting the 'Power On' bit on the interface.

Note: in the event of a failure of the controlling device, e.g. a software 'crash', the watchdog pulses will stop and after a few seconds the HT10XC will switch itself back into the Standby condition.

In remote mode the sensor readings are usually displayed on the controlling or remote computers according to the software being used. However, the front panel displays described in Manual mode are still active in Remote mode.

Front of Service Unit

Refer to Figure 1.

The following facilities are provided on the front panel of the service unit:

A mains standby switch (1), located on the front of the service unit allows the service unit to be turned off totally, or enabled into Standby Mode. All of the individual electrical circuits inside the enclosure are disabled when switched off.

The Manual/Remote switch (2) defines whether the unit is to be operated under Front Panel Control, or under Computer Control, as described above. Note: the front panel displays and selector switches are functional under both modes of operation.

The variable DC voltage supplied to the heat transfer accessory, via socket OUTPUT 2 at the rear of the service unit, is adjusted using the multi-turn potentiometer (3) marked VOLTAGE CONTROL. The range of the output voltage is continuously adjustable from 0 Volts to 24 Volts DC using the multi-turn potentiometer. The selector switch (2), adjacent to the potentiometer, should be set to the MANUAL position to allow adjustment using the potentiometer. The selector switch is only set to the REMOTE position if the voltage is to be controlled from an external signal via the USB Port connector (4).

The actual voltage supplied can be monitored using the top panel meter (5) when the measurement selector switch (6) is set to position V. The readout is calibrated directly in Volts with a range of 0 to 24 VDC and a resolution of 0.1 Volts.

Similarly the current can be monitored when the selector switch (6) is set to position I. The readout is calibrated directly in Amps with a range of 0 - 9 A and a resolution of 0.01 A.

Other relevant parameters on the heat transfer accessories can be measured as follows:

Thermal radiation R

A radiometer is incorporated on the HT13 to measure the thermal radiation. This instrument is connected to the socket marked R (7) on the front of the service unit.

The thermal radiation is read on the top panel meter (5) when the measurement selector switch (6) is set to position R.

The thermal radiation is indicated directly in units of Watts/metre² over the range 0 - 333 W/m² with a resolution of 1 W/m².

A zero potentiometer (8) to the left of the radiometer socket allows any offset in the reading from the radiometer to be corrected.

Light illumination L

A light sensor is incorporated on the HT13 to measure the light illumination. This instrument is connected to the socket marked L (9) on the front of the service unit. The light illumination is read on the top panel meter (5) when the measurement selector switch (6) is set to position L.

The light illumination is indicated directly in units of Lux over the range 0 - 234 Lux with a resolution of 1 Lux.

Air Velocity Ua

A vane type anemometer is incorporated on the HT14, HT14C, HT16 and HT16C to measure the velocity of the air passing through the duct. This instrument is connected to the socket marked Ua (10) on the front of the service unit. The air velocity is read on the top panel meter (5) when the measurement selector switch (6) is set to position Ua. The air velocity is indicated directly in units of metres/second over the range 0 - 10 m/s with a resolution of 0.1 m/s.

Cooling Water Flowrate Fw

A cooling water flow sensor is incorporated into the HT11C and the HT12C. It is also available as an optional accessory with the HT11 and HT12. The sensor is connected to the socket marked Fw (11) on the front of the service unit. The flow of cooling water is read on the top panel meter (5) when the selector switch (6) is set to position Fw.

The flowrate is indicated directly in units of litres/min over the range 0 - 1.50 l/min with a resolution of 0.01 l/min.

Temperatures T1 - T10

Temperatures on the various heat transfer accessories are measured using up to 10 type K thermocouples installed in appropriate tappings on the accessory (thermocouples are supplied with the accessory). Each thermocouple lead is numbered to allow connection to the appropriate thermocouple socket (12) at the bottom of the front panel on the service unit.

The required temperature reading is selected via a switch (13) and displayed on the adjacent panel meter (14). Temperature readings are displayed directly on the meter in units of °C.

Thermocouples T1 - T9 are connected using miniature plugs/sockets. Readings are in the range 0 to 133°C with a resolution of 0.1°C.

Thermocouple T10 is connected using standard plugs/sockets. Readings are in the range 0 to 600°C with a resolution of 1°C. (The sockets are polarised by size to prevent high temperature thermocouples from being connected to low temperature channels.)

Auxiliary Drive

The Auxiliary drive potentiometer (15) controls the output to the cooling water flow control valve (HT11C and HT12C) or the air flow control (HT14C and HT16C). The output percentage is read on the top panel meter (5) when the selector switch (6) is set to position Aux. The relevant cable (to the flow control valve or fan) should be connected to the socket marked AUXILARY OUTPUT on the back of the HT10XC console. On the HT16C this cable connection also allows computer control of the radiation shield.

USB Port

This is a USB socket (4) on the right hand side of the front panel. It allows all of the temperatures and other measurements to be connected simultaneously to a PC. It also allows the PC software to control the Heater voltage directly, together with another input (use may vary on different accessories).

Educational and Data Logging Software is available for all of the HT10XC range of Heat Transfer equipment.

Other interfaces could also be used with this I/O Port. Full details of the signals and scaling are given in the [USB Port Channels Section](#).

Rear of Service Unit

Please refer to Figure 2.

The following facilities are provided on the rear panel of the service unit:

The Residual Current Circuit Breaker (16) is a device for the protection of personnel in the event of an electrical fault or short to earth. All electrical circuits inside the service unit and all accessories connected to it are protected by this device. Normal operation of the equipment is achieved with the switch in the UP position.

The mains power output socket OUTPUT 1 (17) is a mains power source used for driving external ancillary equipment up to 4 Amps maximum but specifically the accessories HT14, HT14C, HT16 and HT16C which incorporate a mains powered centrifugal fan. The mains supply from OUTPUT 1 is at the same voltage and frequency as the electrical supply to the service unit.

The low voltage DC export socket OUTPUT 2 (18) is used to provide variable DC voltage from 0 to 24 V to the heater on the appropriate heat transfer accessory and provides immunity from fluctuations in the mains electrical supply.

This supply is also used to operate the circulating pump when using the HT17 accessory. The electrical lead and matching plug are integral with the appropriate accessory.

Installation

Advisory

Before operating the equipment, it must be unpacked, assembled and installed as described in the steps that follow. Safe use of the equipment depends on following the correct installation procedure.

Electrical supply


	HT10XC-A	HT10XC-B	HT10XC-G
Green/yellow lead	Earth (Ground)	Earth (Ground)	Earth (Ground)
Brown lead	Live (Hot)	Live (Hot)	Live (Hot)
Blue lead	Neutral	Neutral	Neutral
Fuse rating	5A	10A	5A
Voltage	220-240V	110-120V	220V
Frequency	50Hz	60Hz	60Hz

Installing the optional PC Software

If it is required to operate any of the accessories associated with HT10XC using the optional software supplied with HT10XC then it will be necessary to install the software from the CD-ROM supplied with HT10XC onto an appropriate PC (PC not supplied).

For instructions on how to install and run the software insert the CD-ROM into the optical drive on the PC (PC not supplied) then choose 'Help' from the menu.

After installing and running the software for the appropriate accessory on the PC, instructions on how to operate the software can be obtained by choosing the 'Help' tab in the top right hand corner of the screen as shown below:

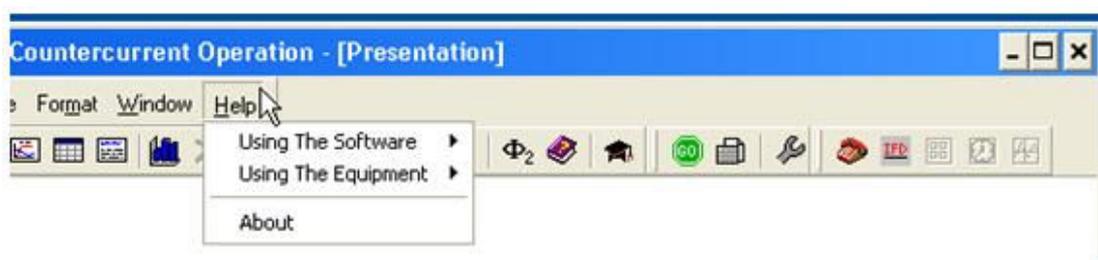


Note that when operating the software for the first time it will be necessary to enable the USB virtual COM port by choosing the Red telephone icon (Start COM session).



Full instructions about enabling the port are included in the Help menus.


Installing the Equipment

- 1 Connect the HT10XC to a suitable mains supply, using the mains lead supplied. The voltage and frequency requirements are noted on a plate by the mains connector.

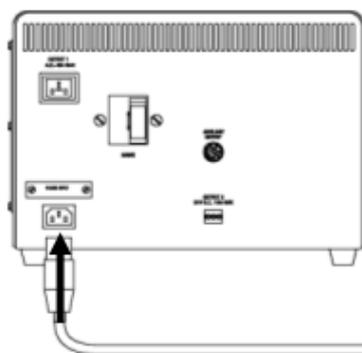


	Volts	Freq (Hz)	Current
HT10XC-A	220-240	50/60	6 A
HT10XC-G			
HT10XC-B	110-120	50/60	10 A

Connect to suitable supply

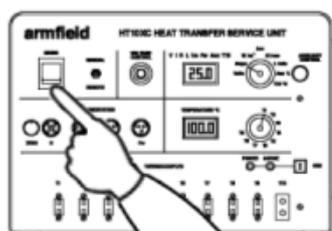


Switch on the console.

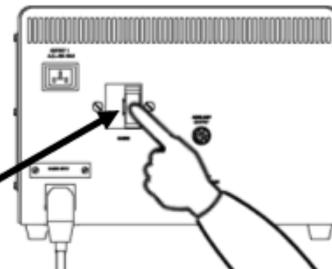

Test the operation of the Residual Current Device (RCD) by pressing the 'TEST' button:

2

Connect the computer to the HT10XC USB port using the USB connection lead provided. The red and green LED's on the HT10XC front panel will be illuminated whenever the computer is powered up connected to the service unit via the USB.

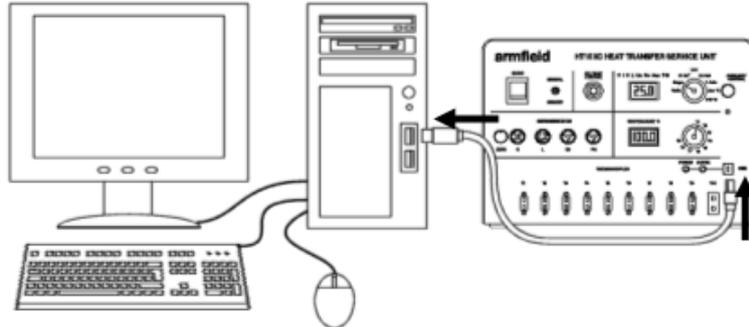


Load the HT10XC software: Use Start \ Programs to locate the Armfield software folders then choose 'Armfield Heat Transfer HT10XC-306' followed by any of the accessories to HT10XC as appropriate.

Refer to the section 'Operating the Software' for further information about using the software

3

CONNECTING TO A WATER SUPPLY (HT11/HT11C and HT12/HT12C)


Use a 12mm (half inch) hose to connect the cooling water supply to the pressure regulator (water inlet), and secure the tube with a suitable clip.

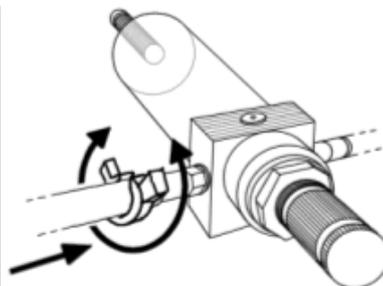

4


CONNECTING THE POWER AND SENSOR LEADS (ALL ACCESSORIES)

Switch off the HT10XC console.

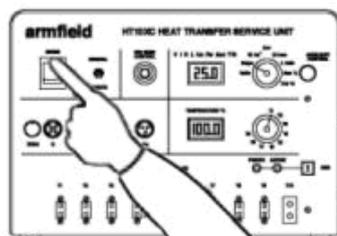


The green miniature thermocouple plugs numbered 1 upwards (maximum 9) should be connected to the corresponding thermocouple sockets numbered T1 to T9.


The larger green thermocouple plug (if present for the accessory) should be connected to the thermocouple socket numbered T10.

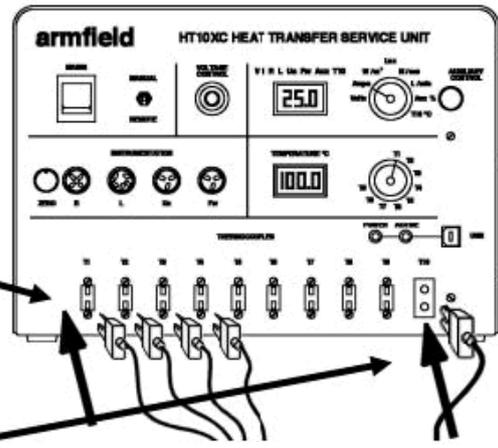


The power supply cable for the centrifugal fan (HT14, HT14C, HT16 or HT16C) should be connected to the socket marked OUTPUT 1 at the rear of the service unit.

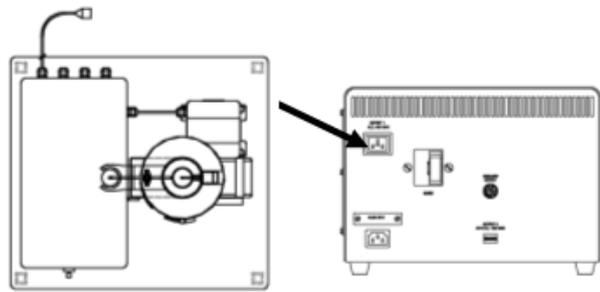

The appropriate heat source, light source or circulating pump (HT17) should be connected to the socket marked OUTPUT 2 at the rear of the service unit.

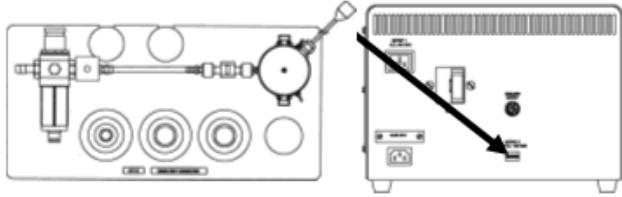


The flow control valve (HT11C or HT12C) or fan control cable (HT14C or HT16C) should be connected to the socket marked AUXILIARY OUTPUT at the rear of the service unit.

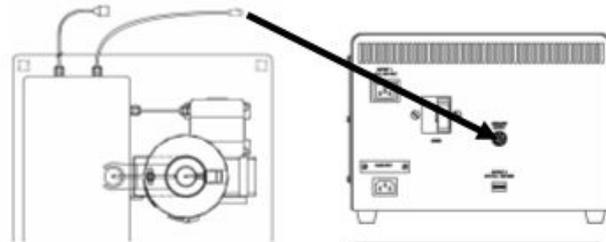


The radiometer (HT13) should be connected to the socket marked R at the front of the service unit.




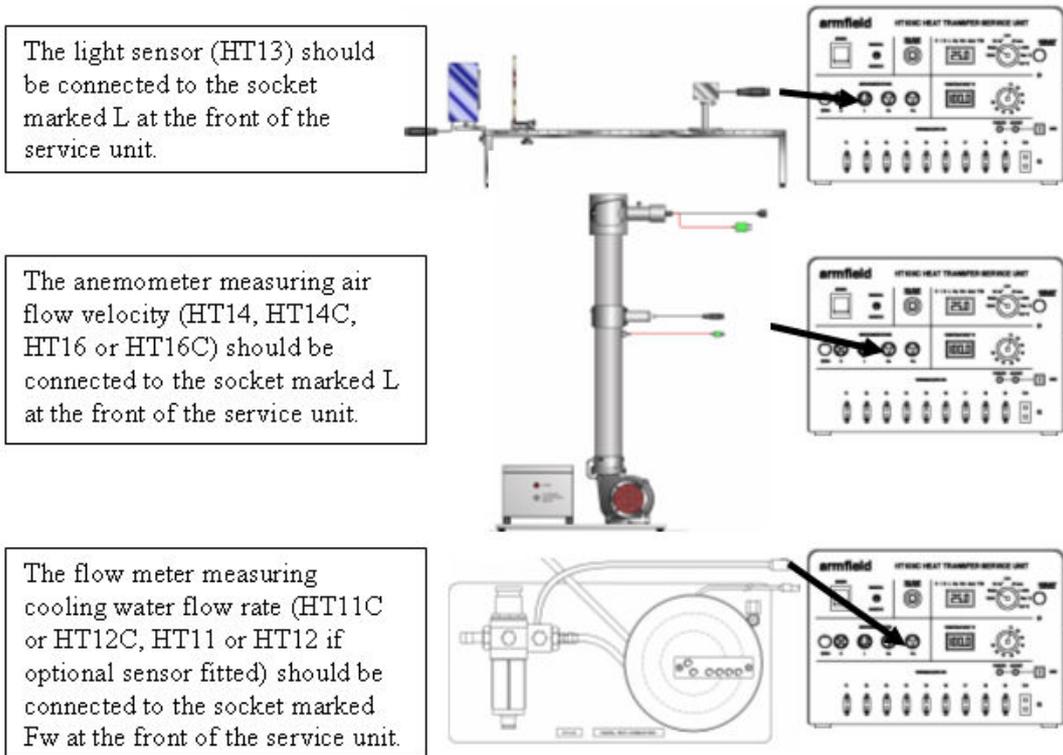



5 CHECKING THE CONFIGURATION

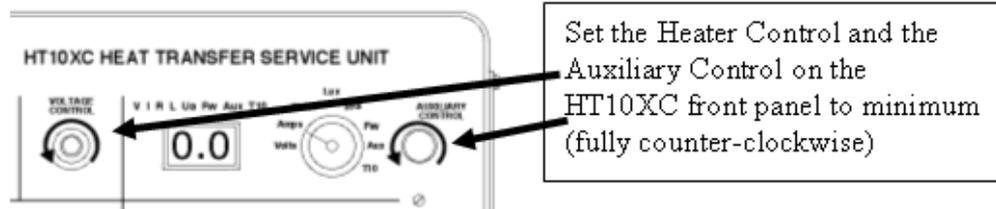

Switch on the HT10XC and set to 'Manual' mode. The displays should illuminate.

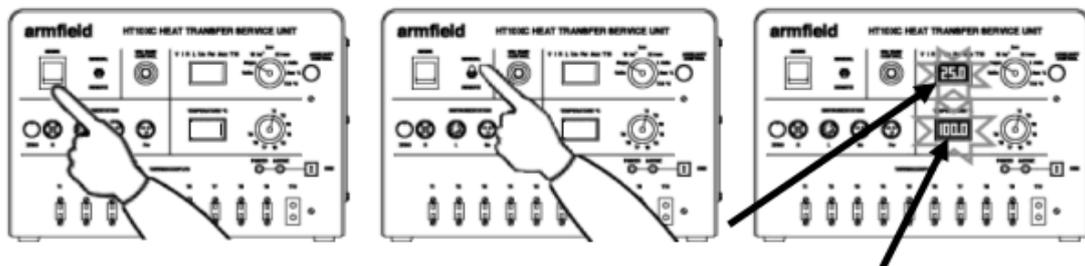


Use the Temperature selector switch to check all thermocouples in use read sensible values (room temperature, usually between 15 and 30 °C) on the display. (An over-scale reading usually means the thermocouple is disconnected.)

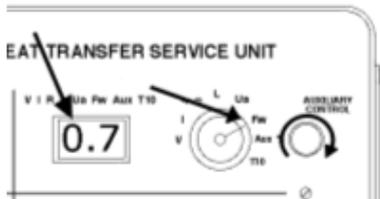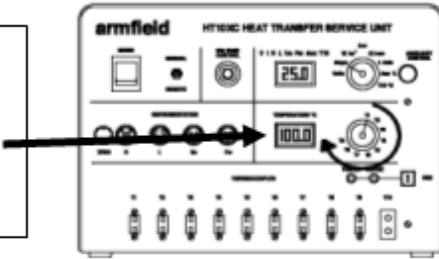

Set the 'Auxiliary' control to 50%.
On HT11C/12C water should flow (see note 7 to set the pressure regulator). Set selector switch to 'Fw' and check the flowmeter is reading.
On HT14C/16C the fan should start. Set selector switch to 'Ua' and check the air velocity is reading.

Set the Function selector switch to 'V' for the heater voltage and adjust the voltage to approximately 15V.

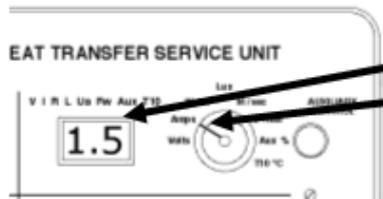


Set the function selector switch to 'I' to measure the heater current. This should be approx 1.5 Amp. If the reading is 0 check that the heater lead is connected properly to OUTLET 2.



6 SETTING THE WATER PRESSURE REGULATOR (HT11C and HT12C)

With the cooling water supply connected and switched on to its normal setting (usually full on), set the Auxiliary Control to maximum (100%).


Set the selector switch to 'Fw' and measure the flow rate. This should be between 1.4 and 1.5 litres/minute.

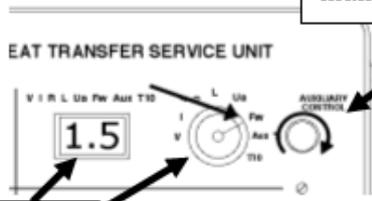

If the flow is not around 1.4 – 1.5 l/min, adjust the pressure regulator: pull out the grey knob, and turn the knob until the correct flow rate is reached.

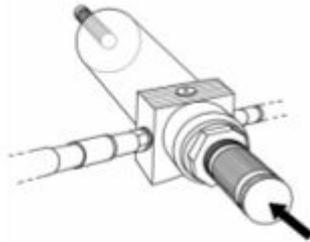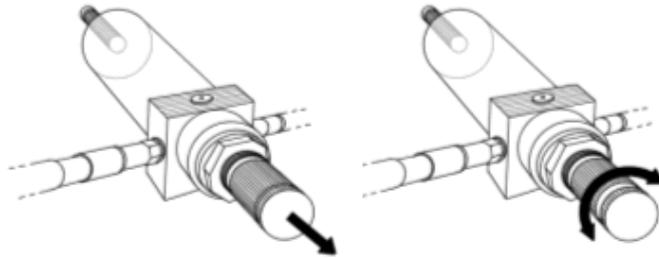

When the flow is correct, lock the valve by pushing back in the handle.

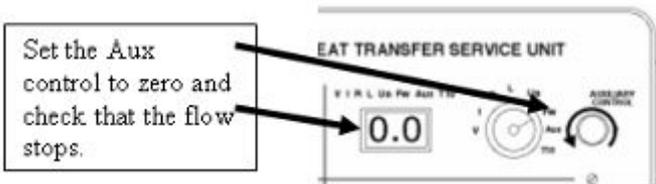

Electrical Wiring Diagram

Click on the link to invoke the Wiring Diagram: [Wiring Diagram CDM30360K](#)

Printed Versions of this Instruction Manual

Please note, all wiring diagrams are appended at the rear of this manual. If viewing this Instruction Manual via Help Text in Armfield Software refer to the printed version of the manual for these diagrams.

Operation


Where necessary, refer to the drawings in the [Equipment Diagrams](#) section.

The apparatus must be set up in accordance with the Installation section. Additionally, ensure you have read the Important Safety Information section.

Operating the optional PC Software

Each of the accessories associated with HT10XC has optional PC software that is installed from the CD-ROM supplied with HT10XC.

Details about operating the software can be obtained by choosing the 'Help' tab in the top right hand corner of the screen as shown below:

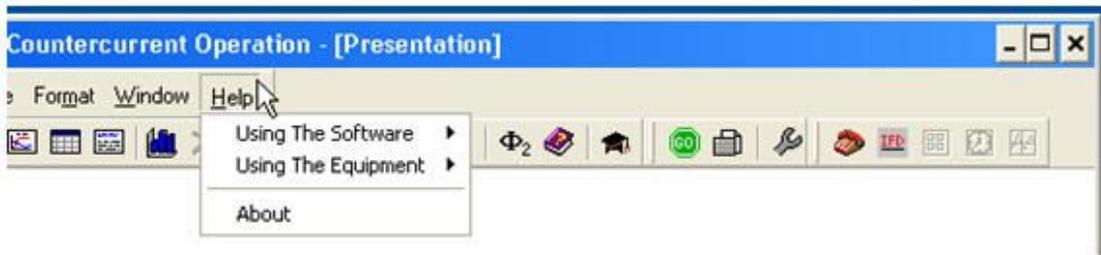

Operating the Equipment

The unit is switched on using the switch on the front of the unit. The circuit breakers and RCD device located at the rear of the unit should be turned on beforehand. Both the temperature controller and conductivity display should illuminate.

Setting the Heater Voltage (All accessories except HT17).

When operating the equipment manually using the front panel controls ensure that the selector switch (2) is set to the MANUAL position. This allows the voltage supplied to the heater to be adjusted using the multi-turn potentiometer (3) marked VOLTAGE CONTROL.

The selector switch is only set to the REMOTE position if the voltage is to be controlled from an external signal via the USB Port connector (4).

The range of the output voltage is continuously adjustable from 0 Volts to 24 Volts DC using the multi-turn potentiometer. (Ensure that the clamp on the side of the knob is released before turning the knob.)

Note: The 24 volt DC supply is used to operate the circulating pump on the accessory HT17. The pump is connected to the DC outlet socket (OUTPUT 2) on the rear panel of the service unit. The speed of the pump can be adjusted by varying the setting of the multi-turn potentiometer in the same way as changing the voltage to a heater.

Measuring the Power to the Heater (All accessories except HT17)

While adjusting the heater voltage the actual voltage supplied to the heater can be monitored by setting the selector switch (6) to position V. The reading is displayed directly in Volts on the top panel meter (5).

The current drawn by the heater in the accessory can be monitored by setting the top measurement selector switch (6) to position I. The reading is displayed directly in Amps on the top panel meter (5).

As the electrical supply to the heater is Direct Current the power supplied to the heater is simply obtained from the product of the Voltage and Current, i.e.

$$\text{Heater Power } Q = \text{Voltage } V \times \text{Current } I$$

eg. If $V = 15.0$ Volts and $I = 2.00$ Amps then $Q = 2 \times 15 = 30.0$ Watts

Note: Some of the accessories incorporate a thermostat to limit the maximum operating temperature. If the heater voltage is set too high, resulting in excessive temperature, the current to the heater will be disconnected until the thermostat resets when the temperature falls. If the display shows no current when voltage is applied to the heating element check that the relevant temperature on the accessory is not excessive. If the temperature is excessive set the Voltage Control to zero and allow the thermostat to reset (Refer to the Operational Procedures in the teaching manual supplied with the accessory for further information).

Measuring Temperatures (T1 - T10 as appropriate on all accessories).

To monitor any of the thermocouples installed on one of the heat transfer accessories simply set the temperature selector switch (13) to the required position and read the corresponding value on the lower panel meter (14).

Temperatures T1 to T9 are indicated in the range 0.0 - 133.0°C with a resolution of one decimal place.

Temperature T10 is indicated in the range 0 - 600°C with a resolution of no decimal places.

Measuring Thermal Radiation (Radiometer on HT13).

When the radiometer is connected to the socket (7) marked R then the thermal radiation can be read on the top panel meter (5) with the selector switch (6) set to position R.

The thermal radiation is indicated directly in units of Watts/metre² (maximum 333 W/m²).

A zero potentiometer (8) to the left of the radiometer socket allows any offset in the reading from the radiometer to be corrected.

Measuring Light Illumination (Lightmeter on HT13).

When the lightmeter is connected to the socket (9) marked L then the illumination can be read on the top panel meter (5) with the selector switch (6) set to position L.

The light illumination is indicated directly in units of Lux (maximum 234 Lux).

Measuring Air Velocity (Anemometer on HT14, HT14C, HT16 and HT16C).

When the anemometer is connected to the socket (10) marked Ua then the air velocity can be read on the top panel meter (5) with the selector switch (6) set to position Ua.

The air velocity is indicated directly in units of metres/second (maximum 10.0 m/s).

Measuring Cooling Water Flow Rate (Flow sensor on HT11C and HT12C, optional on HT11 and HT12)

When the flow sensor on HT11C or HT12C (optional flow sensor SFT2 on HT11 or HT12) is connected to the socket (11) marked Fw then the flowrate can be read on the top panel meter (5) with the selector switch (6) set to position Fw. The cooling water flowrate is indicated directly in units of Litres/min (Maximum 1.50 l/min).

Operation using customer Generated software

Channel Allocations

The interface between the Armfield heat transfer service unit and the computer is a Universal Serial Bus (USB) interface, meeting the standard Microsoft protocols. Armfield are registered with Microsoft as an authorised supplier of USB interfacing equipment.

The interface is capable of passing data on 26 channels, as described below:

- Analogue Inputs – 8 differential channels or 16 single ended channels, each with –5V to 5V signals digitised into a 12-bit number. The interface will pass a value between –2047 and 2047 to the computer.
- Analogue Outputs – 2 channels, each with –5V to 5V signals, taken from a 12-bit number. Computer must pass a value between –2047 and 2047 to the unit.
- Digital Inputs – 8 channels each receiving a 0 or 1.
- Digital Outputs – 8 channels each passing a 0 or 1.

The channel allocations for the HT10XC are shown in the Equipment Specifications Section in [USB Channel Numbers](#).

Equipment Specifications

Overall Dimensions

Height - 240 mm

Width - 320 mm

Depth - 370 mm

USB Channel Numbers

The channel numbers for the USB port are listed below for information:

Channel No	Function/Description	Scaling
Analog Inputs		
0	Temperature T1	-5V - +5V, 0 - 133°C
1	Temperature T2	-5V - +5V, 0 - 133°C
2	Temperature T3	-5V - +5V, 0 - 133°C
3	Temperature T4	-5V - +5V, 0 - 133°C
4	Temperature T5	-5V - +5V, 0 - 133°C
5	Temperature T6	-5V - +5V, 0 - 133°C
6	Temperature T7	-5V - +5V, 0 - 133°C
7	Temperature T8	-5V - +5V, 0 - 133°C
8	Temperature T9	-5V - +5V, 0 - 133°C
9	Temperature T10	0 - +5 V, 0 - 500°C
10	Air Flow F1	0 - +5 V, 0 - 10 m/s
11	Water Flow F2	0 - +5 V, 0 - 1.5 l/min
12	Voltage V	0 - +5V, 0 - 25V
13	Current C	0 - +5V, 0 - 10 Amp
14	Radiometer R	0 - +5V, 0 - 333W/m ²
15	Light Meter L	0 - +5V, 0 - 234 Lux
Digital Inputs		
0	24 V monitor	

1	Bottom Limit HT16C	
4	Top Limit HT16C	
Analog Outputs		
0	Voltage Control (PSU)	0 – 24 Vdc
1	Fan inverter speed control (HT14C or HT16C) Cold water valve control (HT11C or HT12C)	0 – 5 Vdc
Digital Inputs (0-5V dc)		
0	Power On required	1 = on
1	Watchdog pulse	1 pulse every 5 secs
4	Shield up/down (HT16C)	1 = up

Environmental Conditions

This equipment has been designed for operation in the following environmental conditions. Operation outside of these conditions may result reduced performance, damage to the equipment or hazard to the operator.

- a. Indoor use;
- b. Altitude up to 2000m;
- c. Temperature 5°C to 40°C;
- d. Maximum relative humidity 80% for temperatures up to 31°C, decreasing linearly to 50% relative humidity at 40°C;
- e. Mains supply voltage fluctuations up to $\pm 10\%$ of the nominal voltage;
- f. Transient over-voltages typically present on the MAINS supply;

Note: The normal level of transient over-voltages is impulse withstand (over-voltage) category II of IEC 60364-4-443;

- g. Pollution degree 2.

Normally only nonconductive pollution occurs.

Temporary conductivity caused by condensation is to be expected.

Typical of an office or laboratory environment

Routine Maintenance

Responsibility

To preserve the life and efficient operation of the equipment it is important that the equipment is properly maintained. Regular maintenance of the equipment is the responsibility of the end user and must be performed by qualified personnel who understand the operation of the equipment.

General

Regular servicing/maintenance of the equipment is the responsibility of the end user and must be performed by qualified personnel who understand the operation of the equipment. However, the HT10XC requires a minimum of routine maintenance, most of which is standard good practice.

1. The 'Heat Transfer Service Unit' should be disconnected from the electrical supply when not in use.
2. The heat transfer accessory under evaluation should be disconnected from the service unit and drained of water (if appropriate) after use.
3. Test the RCD by pressing the TEST button at least once a month. If the RCD does not trip when the TEST button is pressed then the equipment must not be used and should be checked by a competent electrician.

Fault Finding

Maintenance of the HT10XC 'Heat Transfer Service Unit' does not require access to the electrical circuits or components located inside the metal enclosure. However, in the event of an electrical problem it may be necessary for a competent electrician to gain access to the inside of the enclosure as follows:

- Ensure that the service unit is disconnected from the electrical supply (not just switched off).
- Disconnect any accessory connected to the service unit.
- Unscrew the four socket headed screws on the sides of the enclosure, and the screws holding on the thermocouple calibration inspection hatch.
- Carefully lift the top metal panel from the enclosure taking care to disconnect the earth connection between the top and bottom sections of the enclosure.

The electrical circuits inside the enclosure are now accessible for working on.

Reassembly of the service unit is the inverse of the above instructions. Ensure that the earth connection between the top and bottom panels is remade before replacing the top metal panel.

Details of the connections between the service unit and any of the accessories is given in the appropriate product manual supplied with each accessory.

Fuses: The 0-24 Volt DC variable power supply inside the enclosure (mounted on the base) incorporates a 10 Amp slow blow fuse for internal protection. If no output is available from the socket OUTPUT 2 (18) then this fuse should be

checked for continuity. The fuse is located in an in-line holder adjacent to the smoothing capacitors on the power supply.


The instrumentation switch mode DC power supply inside the enclosure (mounted on the rear panel) incorporates a 2 Amp fuse to protect the mains input to the power supply. If the panel meters on the front of the console do not illuminate when the RCD, the Standby switch and the Manual switch are all enabled then this fuse should be checked for continuity. The fuse is located in a holder at the bottom of the PCB.

Thermocouple Calibration

The thermocouple conditioning circuits (which provide readings from the thermocouples fitted to each of the heat transfer accessories) are located on a PCB inside the electrical console. These circuits are calibrated before despatch and should not require recalibration.

Should calibration become necessary, the USB output channels can be calibrated within the HT10 range software. The calibration process is fully described in the software Help Text.

Manual recalibration of the HT10XC console is achieved using the manual adjustment potentiometers. These can be accessed by removing the Thermocouple Calibration Hatch on the side of the HT10XC.

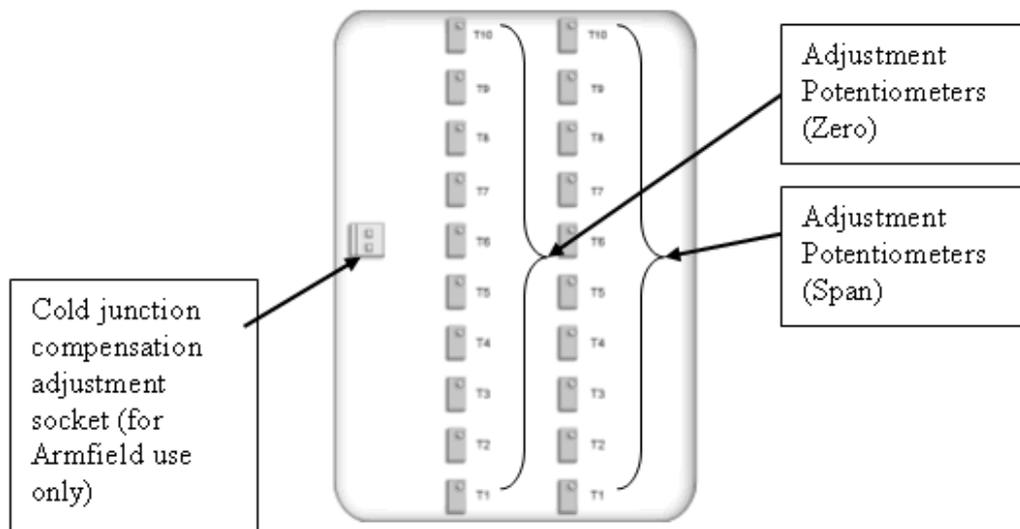

Each Thermocouple Channel has an offset adjustment (zero) and range adjustment (span) potentiometer. There is also a cold junction compensation adjustment which affects all channels.

Minor adjustments can be made to each channel independently, but to do a full calibration follow the following procedure:

- Remove the access panel, switched on the unit and allow the unit to reach a stable temperature.
- Accurately measure the temperature of the printed circuit board using a reference thermometer, and subtract 0.3°C from this reading.

- Calculate the equivalent cold junction compensation voltage for this temperature. (E.g. 20°C would be $20 \times 5 / 200$, = 0.5 Volts) and adjust the cold junction offset potentiometer to achieve this voltage on pin 12 of the measurement socket.
- Connect a thermocouple simulator to each channel in turn. This can be set to any temperature within the range, but for most accurate setting up, choose the cold junction compensation temperature. Adjust the relevant offset potentiometer until the correct value is achieved.

The front panel displays, the measurement connector or the computer software can all be used to read the temperature values. If possible then use whichever method is usually used to collect experimental results during the normal operation of the equipment.

Note: the Armfield computer software also has an inbuilt calibration facility for each channel. Multiple point calibrations can be generated to match the sensor performance exactly. However, once calibrated in this way the values obtained from the sensors using the software may not exactly match the values displayed on the HT10XC front panels.

Contact Details for Further Information

Main Office: Armfield Limited

Bridge House
West Street
Ringwood
Hampshire
England BH24 1DY

Tel: +44 (0)1425 478781

Fax: +44 (0)1425 470916

Email: sales@armfield.co.uk

Web: <http://www.armfield.co.uk>

US Office: Armfield Inc.

436 West Commodore Blvd (#2)
Jackson, NJ 08527

Tel: (732) 928 3332

Fax: (732) 928 3542

Email: info@armfieldinc.com